


WHAT DO YOU STILL NEED?

- 8x type LR6 (AA) 1.5 V batteries or equivalent NiMH rechargeable batteries
- SD card, class 10

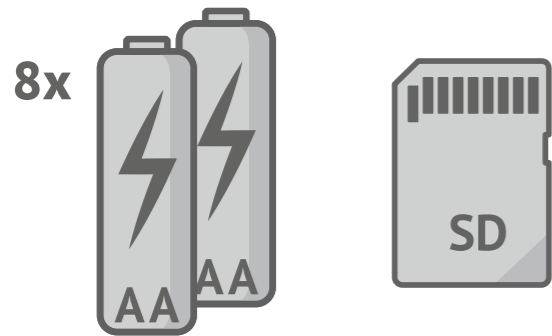

MINOX GmbH

Walter-Zapp-Str. 4 · 35578 Wetzlar · Germany

Tel. +49 (0) 64 41 / 917-0 · Fax +49 (0) 64 41 / 917-612

info@minox.com · www.minox.com

QSG DTC 460, EN, 10/2019

MINOX

QUICK START GUIDE

DTC 460

TRAIL CAMERA



SCOPE OF DELIVERY

- 1 | MINOX DTC 460 Trail Cam
- 2 | Front panel
- 3 | 2x mounting straps
- 4 | USB cable
- 5 | Wall mount
- 6 | This Quick Start Guide
- 7 | Safety instructions

WHAT IS WHAT?

- 1 | Controls display
- 2 | Battery compartments
- 3 | SD card slot
- 4 | Operation mode switch



LET'S GO!

1 | Preparation

- a | Carefully remove the front panel from the front of the camera housing.
- b | Remove the battery magazines and insert 4 batteries into each magazine.
- c | Insert the battery magazines into the camera.
- d | Insert the SD card into its slot.

2 | Set date and time

- a | Push the MENU button.
- b | Scroll down to Date and Time.
- c | Push the OK button.
- d | Using the "Up" and "Down" buttons, set the desired values.
- e | Push OK to verify.

3 | Setting the camera mode (Photo/Video)

- a | Push the MENU button.
- b | Scroll down to Mode.
- c | Using the "Up" and "Down" buttons, set the desired mode.
- d | Push OK to verify.

4 | Turning the camera on

- a | Mount and position the camera at the desired location.
- b | Turn the main switch to ON.
- c | Using gentle pressure, attach the front panel to the front of the camera.

All setting options can be found at www.minox.com -> Support -> Downloads